




STOP IMMEDIATELY – DO NOT DISCARD



Controlant SAGA Receiving Instructions	
Please Execute the Following Steps:	
Upon receipt, remove Controlant SAGA from shipping container or pallet	
	Check display for the <b>alarm</b> icon
	Push and hold the stop button for 5 seconds
	Shipment LED will light up for 3 seconds
	If there is an alarm, <b>alarm LED will be on for 3 seconds</b>
	<b>For alarms –</b> <ul style="list-style-type: none"> <li>• <b>Segregate product</b> within proper storage temperature and do not use until disposition is provided by Merck</li> <li>• Complete <b>Notification of Temperature Excursion</b> form and send email notification to <a href="mailto:osinboxusdc@merck.com">osinboxusdc@merck.com</a></li> </ul>
	If NO alarm icon and no alarm LED lights – the product has stayed within temperature and can be accepted
Place product under proper storage conditions according to product label	
Return Controlant SAGA for reuse by following return instructions	

Note: If the connection status is showing no signal and/or the battery is <10% -

- Plug USB cable to a USB charger or computer port and charge for >20 minutes
- Unplug and repeat steps above. Check battery and connection status
- If battery is still <10% and/or no signal is detected, email [support@controlant.com](mailto:support@controlant.com) and provide Controlant SAGA serial number and your location

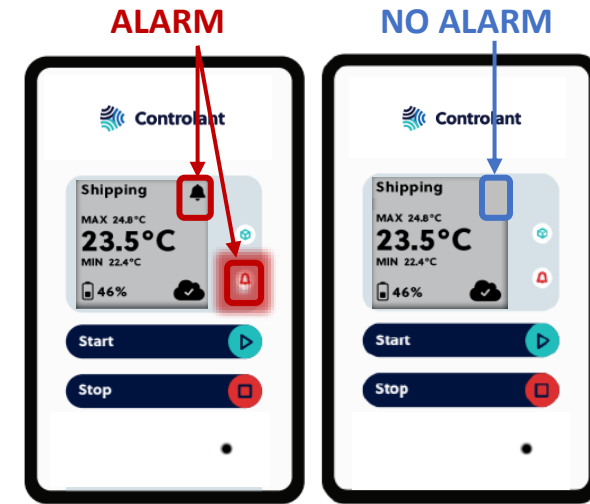

**DO NOT DISCARD - RETURN CONTROLANT LOGGERS:**  
 Place Controlant logger in the designated Controlant return box stored onsite, in the Aerosafe reusable shipping container, or in the Smart label envelope.  
 For return boxes, Controlant will schedule pick-ups and email a return label to place on the return box for pickup.

